

# **HYDX**


Fujian Juston Electronic Equipment Co.,Ltd.  
[www.hydxradio.com](http://www.hydxradio.com)

# **HYDX**

## **D35Plus**

Digital DMR Two-way Radio

## **User's Manual**

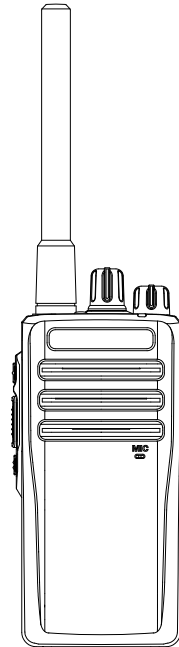

**DMR**  
DIGITAL MOBILE RADIO ASSOCIATION

## Brief Introduction

Thank you for buying hand held walkie-talkie. The walkie-talkie will provide cost-effective communication equipment and perfect solutions for various business places. This product uses the professional commercial frequencies, it is necessary to apply for permission to the wireless administrator of the provinces and autonomous regions in the local country.

Please read this manual carefully to understand how to properly operate the radio before use.

## Contents

Unpacking and Checking Equipment.....	01
Battery Usage Information.....	02-03
Install/Remove Accessories.....	04-05
Getting Familiar.....	06-08
Overview.....	09-10
Menu Operation.....	11-12
Function Settings.....	12-22
Optional Function.....	23
Troubleshooting.....	24
Warranty Card.....	25

## Unpacking and Checking Equipment

**Welcome to use the wireless walkie-talkie, please check before using:**

Please check the packing box of this product and see if there are signs of damage.

Please open the packing box carefully. We recommend that you identify the items listed in the following packing list. If you find that our product and its accessories in hand are lost or damaged during the shipment. Please immediately contact dealers.

### Parts List

Item	Quantity
Radio	1
Rubber Antenna	1
Li-polymer Battery	1
Desktop Charger	1
Power Adapter	1
Belt Clip	1
Hand-Strap	1
User's Manual	1

## Battery Usage Information

### Using the Battery

The battery is not completely charged at the factory, please charge it before using.

To extend the battery life time, please power off the batteries when not using two way radio and store battery in a cool (temperature less than 25°C) and dry place.

### Charging the Battery

Please use the designated charger to charge battery, the battery is not completely charged at the factory, if you store it for a long time (more than two months) after purchase, the first time to charge battery cannot make it reach its normal operating capacity. After repeated charging/discharging it two or three times, the operating capacity will increase to its normal capacity.

### Please Charge the Radio According to Operation Steps as Follows:

1. Inset the plug of charger into power supply socket.
2. The charging indicator lights green.
3. Inset the battery or radio equipped with battery into the charger.
4. Confirm the battery and charger terminal contact reliably, when charging indicator light turns into red and charging starts.
5. After completion of charge (charging time is about 4 hours), indicator light turns to be green.

### Indicator Display As Following

Status	Indicator
Power Connected	Orange light is on
No battery	The light goes out
Charge Normally	Red light is on
The battery is fully charged	Green light is on
Fault	The light goes out


**Note:** Before charging, please turn off the radio's power which equipped with battery. When charging, using radio will interfere with normal charge of battery.

### Install/Remove Accessories

#### Installing/Removing the Battery


Align the two protruding locating latches above the battery with the corresponding slots in the aluminum housing on the back of the radio to ensure that the battery is in full contact and parallel with aluminum shell. Push the battery along the aluminum guide rail at the back of the radio until it aligns with the battery latch, and upward lock it;

To remove the battery, make sure the radio is off first, then pull down the battery latch. After ensure that the radio and battery are released, push the battery backward out of the radio.

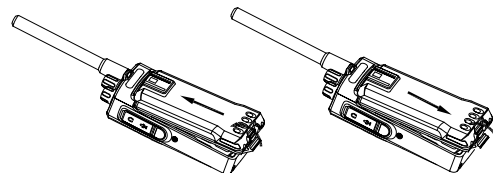


#### Installing/Removing the Antenna

Align the threaded of the antenna with the radio's antenna pedestal. Turn the antenna clockwise to fasten it. To remove the antenna, please turn the antenna counter-clockwise until you can remove it.

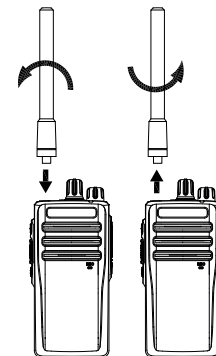


## Installing/Removing the Belt Clip

If necessary, the randomly configured belt clip can be inserted into the slot on the back of the battery pack for easy carrying.





To remove the belt clip, simply press the buckle of the belt clip and push it outward.



## Installing Speaker/Microphone

Lift the headphone cover and insert the speaker/microphone headset directly into the speaker/microphone jack.

## Getting Familiar

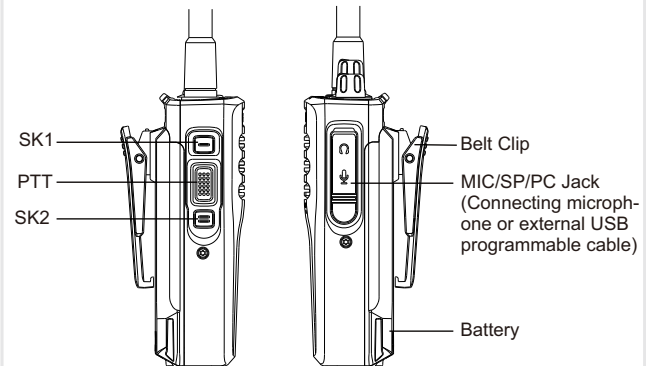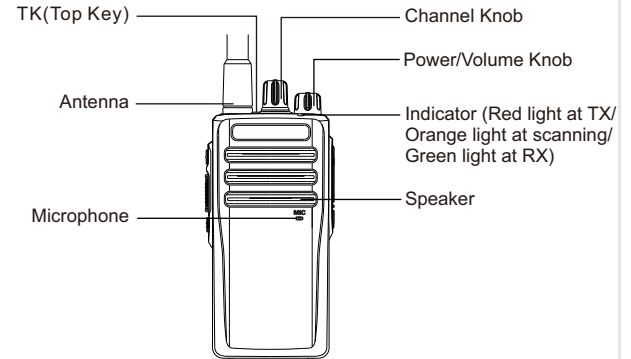

### Programmable Key Function:

Users can set the function of SK1, SK2, TK according to their needs by programming software.

**SK1/SK2/TK:** Defined programmable key (can be set long/short press function)

1	Unassigned (default)
2	All Alert Tones On/Off
3	Emergency On
4	Emergency Off
5	High/Low Power
6	Monitor
7	One Touch Access 1
8	One Touch Access 2
9	One Touch Access 3
10	One Touch Access 4
11	One Touch Access 5
12	One Touch Access 6
13	Repeater/Talkaround
14	Scan On/Off
15	Squelch Level
16	Privacy On/Off
17	VOX On/Off
18	Zone Toggle
19	Battery Indicator
20	Lone Work On/Off
21	Record On/Off (Firmware)

22	Record Playback (Firmware)
23	Delete All Record (Firmware)
24	Noise Reduction (Firmware)

One-touch Access function below

1	None
2	Analog---DTMF calling---DTMF contact
3	Digital---Calling, Kill, Active, Remote Monitor---Contact (Calling, Kill, Active, Remote Monitor only support decode)

## Overview

### Turn On

Clockwise to turn on the radio volume knob, there will be a “KADA” sound, message sound and report the current channel number, while the green light is on.

**Note:** If you want to turn off the radio, anticlockwise to rotate the volume knob until you hear a “KADA” sound.

### Adjust Volume

Clockwise rotate the volume knob to higher the volume or anticlockwise to lower.

### Private Call

This radio supports confirmation private call, if you tick the “Private Call Confirmed” on the channel, it is necessary to detect the presence of the target radio before calling the other party. When the target radio does not exist, press the PTT will not make a private call.

1. When the default communication address of the digital channel is set to private call ID, can press the PTT key to launch a private call for the current contact.
2. When the programming key is set as a one-touch access to digital private call contact, press the corresponding button and press the PTT key can launch private calling.

### Group Call

1. When the default communication address of the digital channel is set to group call ID, can press the PTT key to launch group calling.

2. When the programming key is set as a one-touch access to group call, press the corresponding button and press the PTT key can launch group calling.

### All Call

1. When the default communication address of the digital channel is set to all call ID, can press the PTT key to launch all calling.
2. The receiver of all call can't answer it.

**Note:** If the call prompt setting is enabled, press the PTT key for transmitting, the transmitter and receiver will hear a fixed hint tone.

### Receive and Reply Calls

In the digital mode, when received a private call, the green light is on. In the private call pending time, press PTT key can respond the current private call. Beyond the pending time, it will exit the private call.

When received the group call, in the group call pending time, press PTT key can respond the current group call.

When received the all call, the all call does not have the pending time, so can't respond it.

**Note:** If set the channel free indication tone, when the transmitter release PTT key, receiver will hear a short hint tone.

## Menu Operation

### Contact

Contact list can be viewed on contacts after reading frequency by programming software (up to 10000 digital contacts can be added).

#### 1. Group Call Type

When the type of contact member is selected to group call, you can view or change the name of contact and group call ID.

#### 2. Private Call Type

When the type of contact member is selected to private call, you can view or change the name of contact and private call ID, receive the kill/activation or remote monitoring.

- **Radio Kill:** The radio can be killed. After being killed, all operations are disabled. When the "Radio Disable Decode" which on the "Digit Emergency System" is ticked, the radio can transmit/receive the kill command (If not tick it, the radio can't be killed).

- **Radio Activated:** The radio can be activated to restore it to the normal working state. When the "Radio Disable Decode" which on the "Digit Emergency System" is ticked, the radio can transmit/receive the activation command (If not tick it, the radio can't be activated).

**Note:** Use the programming software to read the radio and program it again also can activate the killed radio.

- **Remote Monitor:** This function allows the radio to be secretly remotely monitored surrounding voice activities without notification. Only the monitored radio ticked the "Remote Radio Decode" on the "Digit Emergency System", its voice activities can be monitored.

#### 3. All Call Type

When the contact member type is selected to all call, can view all call ID.

**Note:** This radio only allowed to add group/private call type's contact by programming software. You can input number (1-16776415). After programming it, you can find the new added contacts in the contact list.

## Function Setting

**Radio Setting:** This function provides some parts of radio's basic setting for user.

- **CTCSS/DCS (Only support analog channel):** The radio's analog channel supports this function to ensure the quality of the call. Voice output is allowed when the transmitted and received subsonic are match. After reading by the programming software, in the analog channel, can set the CTCSS/DCS encode or decode and close. Selected a subsonic value from the exiting list to encode or decode. (The specific subsonic value is referred to the CTCSS table and DCS table)

1. **Decode:** The radio of receiver will decode the CTCSS/DCS sent by the transmitter. When the CTCSS/DCS set up here matches that from the sender can open the speaker and output the voice.



**2. Code:** Before sending the voice, the radio of transmitter will encode the CTCSS/DCS and add it to the voice. This encode will be sent through the carrier. When the received CTCSS/DCS of the receiver matches that setting can open the speaker and output the voice.

**Note:** On the programming software, the analog channel supports setting non-standard CTCSS (range 60Hz-259.9Hz) and non-standard DCS (range 001-777).

CTCSS									
67.0	69.3	71.9	74.4	77.0	79.7	82.5	85.4	88.5	91.5
94.8	97.4	100.0	103.5	107.2	110.9	114.8	118.8	123.0	127.3
131.8	136.5	141.3	146.2	151.4	156.7	159.8	162.2	165.5	167.9
171.3	173.8	177.3	179.9	183.5	186.2	189.9	192.8	196.6	199.5
203.5	206.5	210.7	218.1	225.7	229.1	233.6	241.8	250.3	254.1

DCS									
/	023	025	026	031	032	036	043	047	051
053	054	065	071	072	073	074	114	115	116
122	125	131	132	134	143	145	152	155	156
162	165	172	174	205	212	223	225	226	243
244	245	246	251	252	255	261	263	265	266
271	274	306	311	315	325	331	332	343	346
351	356	364	365	371	411	412	413	423	431
432	445	446	452	454	455	462	464	465	466
503	506	516	523	526	532	546	565	606	612
624	627	631	632	654	662	664	703	712	723
731	732	734	743	754					

- **Squelch:** Filtering out the incoming signals which the intensity is not enough to generate clear to eliminate unwanted noise. The lower the squelch level, the easier to receive the signals. And at the same time, it will be affected by the useless calling. The higher the squelch level, the more useless calls will be filtered. However, calls from remote locations may also be filtered out. Users can set the suitable squelch level according to their needs.

- **Transmitting Power:** Allow users adjust the radio's transmitting power high/low by preset programming key, or modify the high/low power of each channel by programming software.

- **Talk Around:** When the radio works in the repeater mode, but the transfer service is not available, the radio can open the talk around function by preset programmable key to enter communicate. There will be a prompt tone when open the talk around function, the radio use RX frequency to transmitted, so the two radios can achieve communicate directly.

- **Note:** If want to enable this function, the RX frequency and the TX frequency must be different, and the channel must tick the talk around function by programming software.

- **Wide/Narrow Band (only support analog channel):** Allow users set up the radio's wide/narrow band by programming software.

- **Busy Channel Lockout:** Allow users select a state of lockout by programming software. Select the "Always", the BCLO can't work; select the "Channel Free", this channel is not allow transmit when with carrier; select the "Correct CTCSS/CDCSS", this channel is prohibit launching when the code is matched.

- **Time out Timer:** Time out timer function can prevent the current channel being occupied too long by single user. For the much busier channel, can set shorter TOT. If the continuous launching time exceeds the preset value, the radio has the “beep” warning sound, and it will automatically terminate the launch. TOT can be set to infinite or 15-555s by programming software.

- **VOX:** The function of VOX let you don't press PTT key when transmit. After this function is turned on, the TX operation can be started directly by voice. When the voice stops, the TX is automatically ended. It allows users turn on the VOX function by preset programmable key. And the VOX level can be set to 1-10 on the “General Setting” of programming software (level 1 has the highest sensitivity, level 10 has the lowest sensitivity), or set turn on/off in the channel.

- **Digital Encryption (Only supports digital channel):** Voice encryption function can ensure the language communication safety. Allow users turn on/off this function by preset programming key, or select basic /universal encryption type and set encryption key by programming software. The radio that has turned on the encryption function, only the type of voice encryption and encryption key are the same can communicate. If your radio received different encryption key's call, then you will hear confusion. (Use or modify the “Universal” privacy need to write the encryption information alone.)

- **Power Save:** Enable this function can make the free radio automatically enter the power save mode, power save mode can extend the battery's life, but will causes the respond time delay.

- **Prompt Tone:** Allow users turn on/off the prompt tone by programming software or preset programming key. Including the setting of all tones, CH free indication tone, talk permit tone etc. The “all tones” control all hints except the voice announcement and function key, if all tones are turned off, the alarm tone also can still played normal.

- **Voice Announcement Select:** Can set the voice announcement by programming software, it supports two languages of Chinese and English.

### Radio Information

- **Basic Information:** Allow the users to read and consult the basic information of radio by programming software, which including frequency range, last programmed time, model, serial number, CPS version, hardware version, firmware version, device ID.

### Radio Configuration

- **RX Frequency:** Can read, check, or modify the RX frequency of each channel by programming software.

- **TX Frequency:** Can read, check, or modify the TX frequency of each channel by programming software.

- **Channel Name:** Can read, check, or modify the name of each channel by programming software.

- **Color Code (Only support digital channel):** Users can modify the color code of each channel according their needs by programming software. The optional range is 0-15.

- **Repeater Slot (Only support digital channel):** Users can modify

the repeater slot of each channel according their needs by programming software, there have slot 1, slot 2 to select (The different can appear only the optional of “DCDM Switch” on the channel is ticked).

## Zone

The radio can support 4 zones at most, one zone can add 16 channels at most, and 4 zones can support 64 channels at most. You can select the “zone” by programming software, or set the preset programmable key to “Zone Toggle”, and enter to the zone switchable (It need to set more than two zones that can switch the zone).

## Scanning

The radio can support 500 scanning list at most and with a maximum of 63 members for each scan list, each scan list supports a mixture of analog and digital channel, you can add/delete channel or set priority for the channel by editing scan list.

The scan list of current channel adds the scan group, and it contains at least 2 channels that can open the scan function. When scanning, loop listening the channels in the scan list and check whether there have voice activities in each channel. There are three types of scanning can be selected: none, priority channel 1, priority channel 2. The LED indicator lights flash orange. When the scan detects activity in the channel will stop to receive. If receive the unnecessary call, press the programmable key which set to “Nuisance Delete” to temporarily removed the current channel from scan list. If want to close scan, can press programmable key or switch the channel to exit scan function.

**Note:** 1. If channel ticks the “Auto Scan” function, when switched to this channel, the radio will automatically enter to scan.

2. When programmable key is set to “scan on/off”, it can turn on/off the scan by pressing programmable key.

## Digital Emergency Alarm

The alarm mode is used to express emergency situations. You can press the programmable key to launch emergency alarm at any time and enter to alarm mode. The radio supports three types of alarm type and alarm mode.

### Alarm Type:

- **Regular:** When the radio launches an emergency alarm, the LED lights red and the alarm tone is continuously played.
- **Silence:** When the radio launches an emergency alarm, the LED lights red but no alarm tone is played, and it is not allowed any tone that match the reception are played.
- **Silence w/Voice (Silence with Voice):** When the radio launches an emergency alarm, the LED lights red and no alarm tone is played, but allow any voices calls that match the reception are played.

### Alarm Mode:

- **Emergency Alarm:** The radio launches an emergency alarm, when receive the confirmation or the number of attempts reach the limit, it will exit the “alarm” mode.
- **Emergency Alarm w/Call (Emergency Alarm and Call):** Once press “emergency on” key, it will send the emergency alarm message, press the PTT can launch emergency call.

• **Emergency Alarm w/Voice To Follow (Emergency Alarm and Voice):** Once press “emergency on” key, it will send the emergency alarm message, and the voice can be sent automatically.

### **Send Emergency Alarm**

The current channel adds an emergency system and reply channel set as the channel. Then can send emergency information at the current channel. Press the “emergency on” key, the LED indicator light on red.

### **Exit Emergency Alarm**

In normal + emergency alarm mode, when the number of attempts to send an alarm arrives or press the “emergency off” key can exit the alarm. Or press PTT will automatically exit the alarm mode. In the unconventional alarm mode, press the “emergency off” key can exit the alarm mode.

### **Receive Emergency Alarm**

The radio will automatically confirm emergency alarm if activated. When radio receives the signal of emergency alarm, it will play the alarm tone continuously. Otherwise, there is no prompt tone. Press the “emergency off” key can exit the emergency alarm mode.

### **DTMF**

Analog channel, the function of DTMF allows radio to operate when the radio system with interference.

1. **Initiating:** Under analog mode, press the programmable key to start the DTMF call (The programmable key should be set to one touch access to connect DTMF calling ID by programming software and the current channel's “TX signaling” need to be selected to “DTMF” then can be used), after confirming the tone played, press the PTT to talk.

2. **Receive:** Select the “RX signaling” of current channel to “DTMF” by programming software, when the decode number is DTMF personal ID, decode succeed and played bells, then can communicate with the other in the reset time. When the reset time comes, it needs to decode again. If the decode is the same to the kill code or activation code, the radio will be killed or activated.

### **PTT ID**

**Initiating:** Under analog mode, it can set the up/down encode of DTMF by programming software, when the analog channel is enabled in the up/down encode, each time press PTT send up encode, release PTT send down encode.

### **Encryption**

You can use digital or analog way to activate/kill the radio. For example, if the radio was stolen or lost, it can prevent thieves from using it and when you get the radio back, you can enable it.

**Note:** Only the radio turns on the function of kill/ activate (which set up on programming software) can perform it.

### **Lone Worker**

The function of lone worker is suitable to the people who meet an unexpected situation during work, and can't make keystrokes or voice launch in preset time, the radio can automatically enter alarm to get help. Tick the option of "Lone Work" on digital channel by programming software, and set up the "Lone Worker Response Timer" and "Lone Worker Reminder Timer" which on the "General Setting". The response can be selected as keystroke operation and voice launch.

**Note:** 1. Only support digital mode channel.  
2. When an emergency system is not selected, this function is disabled.

### **Battery Power**

Press the preset programmable key can listen to the remaining battery voltage, so that users can understand battery usage and charge the battery timely. If the tone of battery power is played, it means that the battery power is low, should charge the battery as soon as possible. TX will be prohibited after entering to the low battery power warning situation.

### **Universal Privacy (The privacy information needs to be written separately for use or modification)**

The type of universal privacy can be selected to "None/ARC4/AES128/AES256". The radio can set one privacy type, if you want to decode the privacy call or data transmission, the receiver needs to set the same "encryption key" and "privacy type" as the transmitter (suitable for universal privacy).

If your radio receives the privacy calls that with different encryption keys or different key values and key IDs, as well as different type of privacy calls, you will hear the voice of transmission confusion (universal privacy). Press the preset programmable key can turn on/off the privacy.

## Optional Function

### Recording

If the radio has turned on the recording function by programming software, it will segment automatically record the message when transmitting or receiving (whether it's in the analog channel or digital channel). The recording files are created at intervals of several seconds, can set by yourself. When the storage space of recording is used up, the later recording messages will crowd out the earlier recording messages.

#### 1. Record On/Off

Press (or hold down) the specified programmable key to turn on/off the recording function, then the radio can record the content of calling.

#### 2. Record Playback

Press (or hold down) the specified programmable key to turn on the "Record Playback" function, then the radio can playback the content of calling.

#### 3. Delete All Record

Press (or hold down) the specified programmable key to turn on the "Delete All Record" function, then the radio can delete all the content of calling.

### Noise Reduction

Press (or hold down) the specified programmable key to turn on/off the "Noise Reduction" function, then the radio can reduce the noise of the call content.

## Troubleshooting

Symptom	Solution
No power	The battery may have been run out, please update the battery or recharge it. Battery may not be properly installed, please take it off and re-install.
Battery lasts a short time after charge	The battery life is over, please replace new battery.
Can't talk to other member of your group	Verify that you are using the same frequency and QT/DQT as the rest of the group. Verify transmitting is within the range of signal reception/function of the radio.
Hearing other conversation on a channel (not group members)	Please change all radios' QT/DQT setting in your group.
The radio keeps beeping	The radio channel is empty frequency, please switch to another channel or write frequency before use.

## Warranty Card

Contact: \_\_\_\_\_

Company Name: \_\_\_\_\_

ADD: \_\_\_\_\_ Post Code: \_\_\_\_\_

Tel: \_\_\_\_\_ Mob: \_\_\_\_\_

Fax: \_\_\_\_\_ E-mail: \_\_\_\_\_

Purchasing: \_\_\_\_\_ Model No: \_\_\_\_\_

Serial No: \_\_\_\_\_ Purchase Date: \_\_\_\_\_

(S/N): \_\_\_\_\_ (EAN): \_\_\_\_\_

Warranty card No: \_\_\_\_\_

Trouble Description: \_\_\_\_\_

**Note:** This warranty card is an important certificate for the end user to enjoy the warranty service. And it must be stamped and filled in by the authorized dealer to be valid. Please keep it properly.

## Warranty Terms

The warranty period of the product is calculated from the date of sale (according to the date on the sales invoice).

The warranty period of radio is one year, the battery or charger is 6 months, and earphone or other accessories are 3 months.

The warranty will not be covered under the following conditions:

1. Warranty card and purchase invoice cannot be presented.
2. The warranty card has altered or is inconsistent with the product.
3. Defect or damage caused by abnormal or unconventional use of the product.
4. Defect or damage caused by wrong use, accident, water use or negligence.
5. Defect or damage caused by wrong test, operation, maintenance, installation, refit, adjustment etc.

6. Defect or damage caused by unauthorized maintenance, disassembly etc.
7. Defects or damage caused by irresistible factors
8. Have the abrasion in normal use.

The final interpretation belongs to Fujian Juston Electronic Equipment Company.